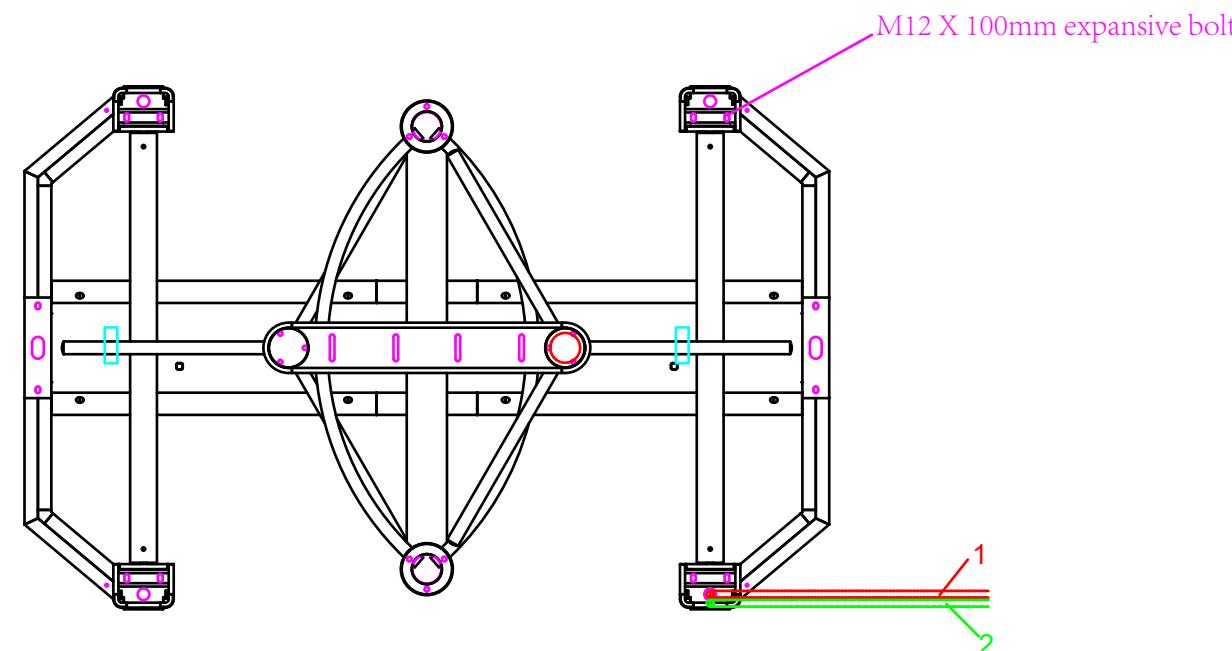
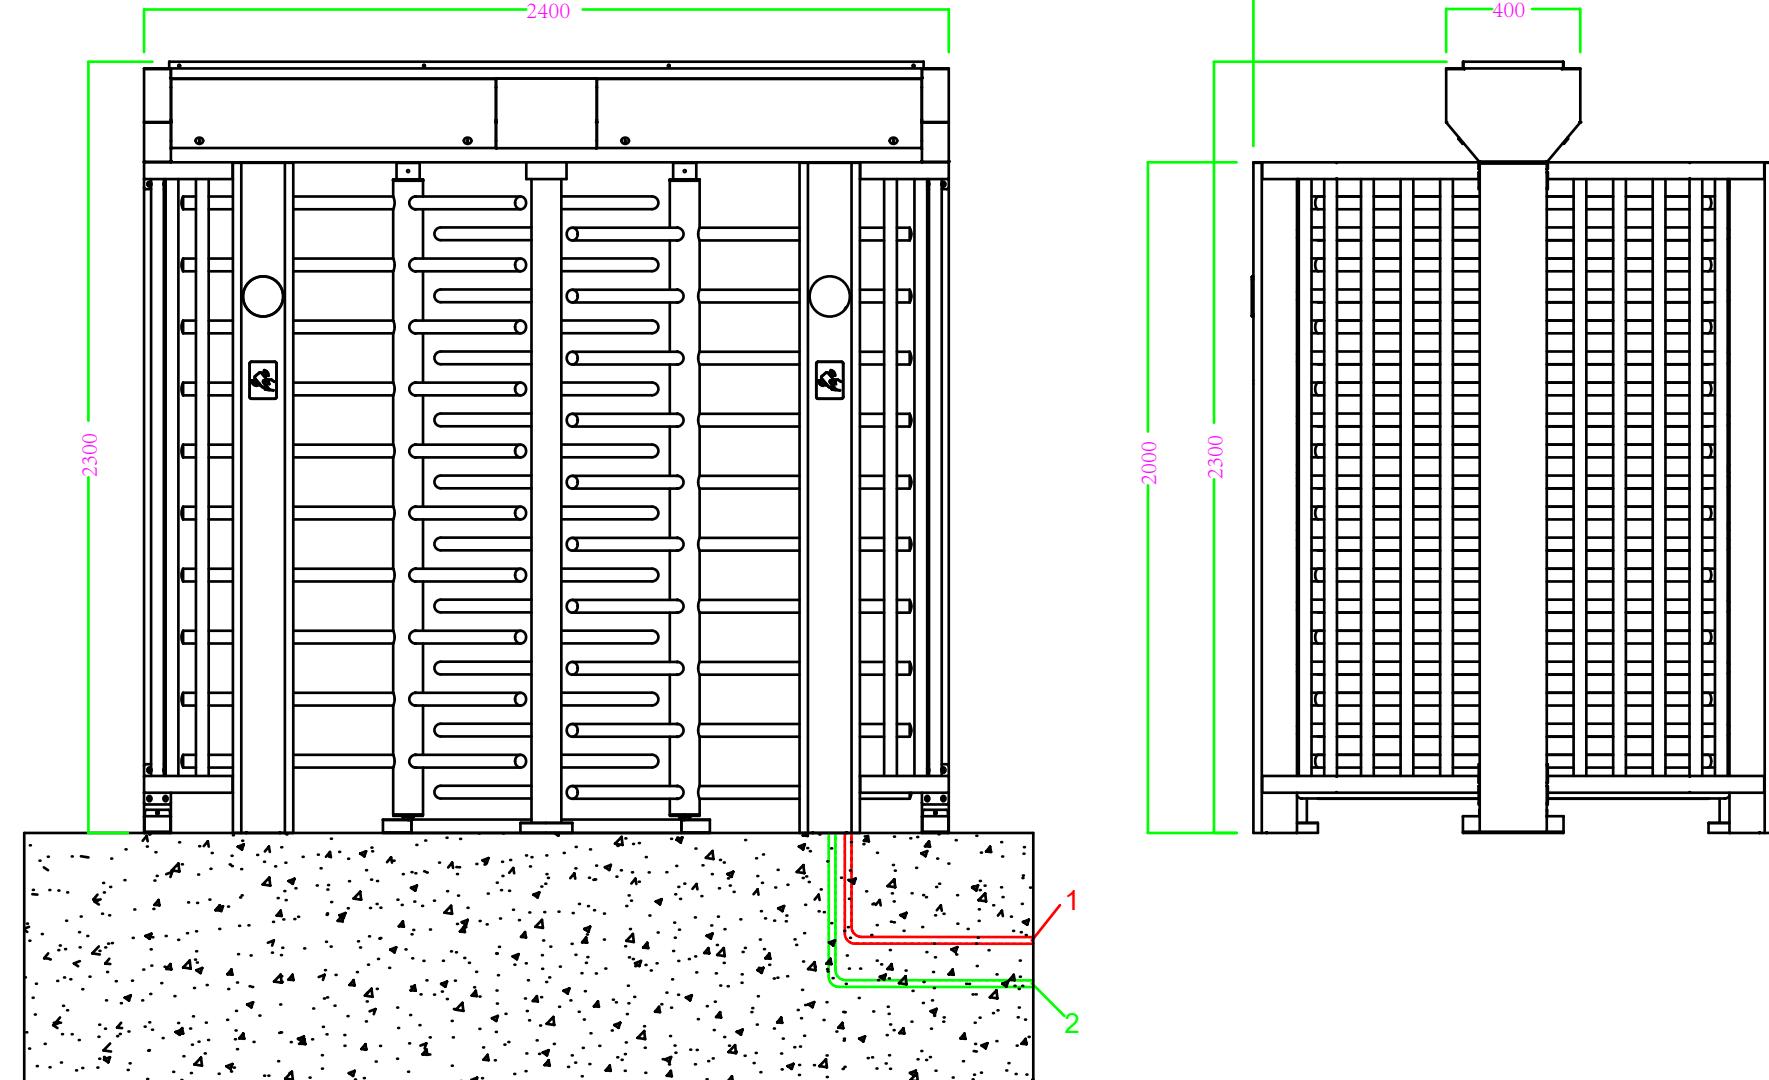


Unit:mm

**Installation Manual:**

- 1 The Ø25mm PVC tube for AC 220V or AC 110V Power wire(3 X Ø2.0mm).
- 2 The tube for RS485 wire (2 X Ø0.5mm) , TCP/IP wire (8 core) , Manually opening the turnstile wire (4 X Ø0.3mm) . The signal wire length should be less than 100m .
- 3 It is PCB board part .
- 4 Fixing the equipment with M12 X 100mm expansive bolt .